


SECTION 9: Parts

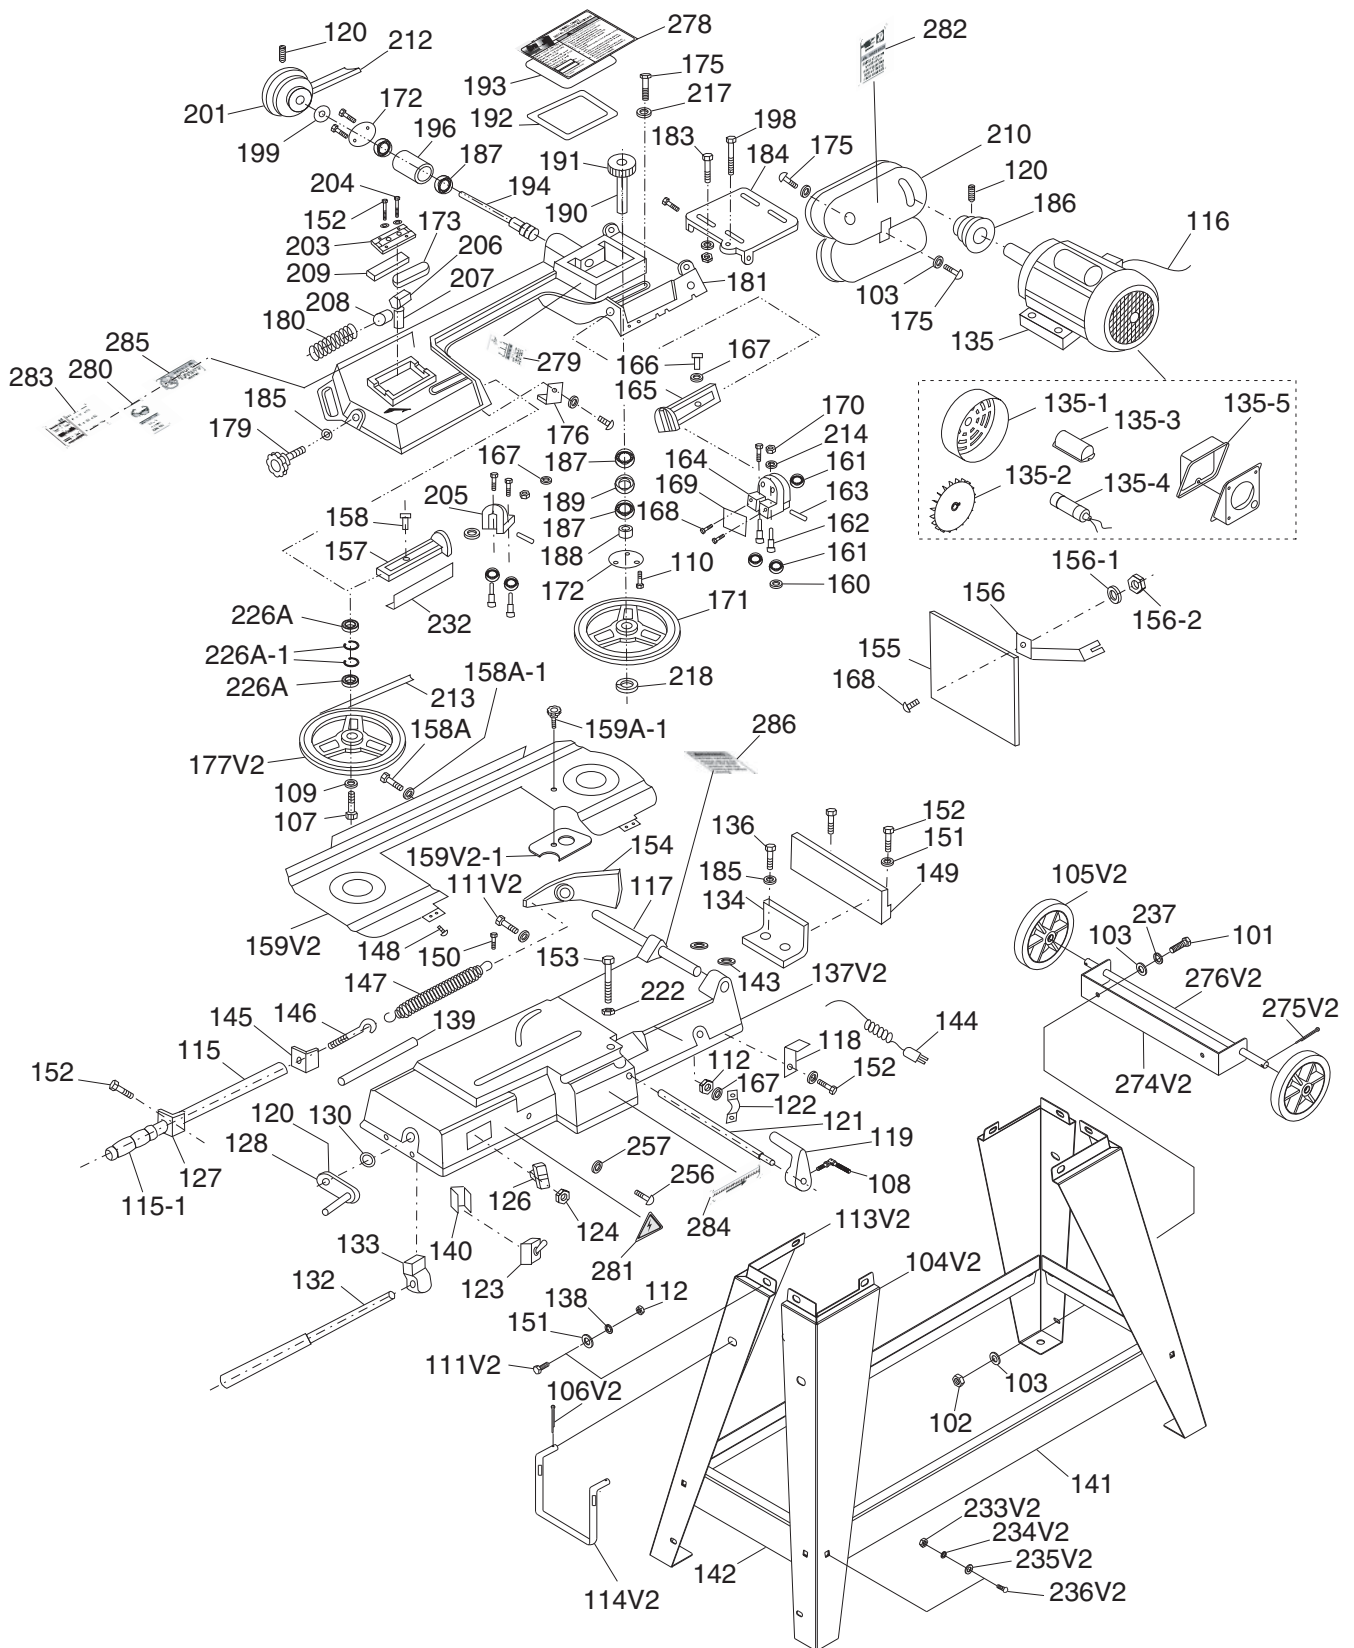

Parts List

REF	PART #	DESCRIPTION
101	P0622101	HEX BOLT M6-1 X 12
102	P0622102	HEX NUT M6-1
103	P0622103	FLAT WASHER 6MM
104V2	P0622104V2	STAND LEG (RIGHT) V2.09.17
105V2	P0622105V2	WHEEL ASSY V2.09.17
106V2	P0622106V2	COTTER PIN 4 X 30 V2.09.17
107	P0622107	PHLP HD SCR M6-1 X 12
108	P0622108	LOCK LEVER
109	P0622109	FLAT WASHER 6MM
110	P0622110	FLAT HD SCR M4-.7 X 10
111V2	P0622111V2	HEX BOLT M8-1.25 X 25
112	P0622112	HEX NUT M8-1.25
113V2	P0622113V2	STAND LEG (LEFT) V2.09.17
114V2	P0622114V2	TRANSPORT HANDLE V2.09.17
115	P0622115	ADJUSTING ROD
115-1	P0622115-1	RUBBER HANDLE GRIP
116	P0622116	MOTOR CORD
117	P0622117	PIVOTING ROD
118	P0622118	SUPPORT PLATE
119	P0622119	WORK STOP
120	P0622120	SET SCREW M8-1.25 X 10
121	P0622121	STOCK STOP ROD
122	P0622122	WIRE RELIEF RETAINER
123	P0622123	SWITCH
124	P0622124	HEX NUT M5-.8
126	P0622126	SWITCH PANEL
127	P0622127	ADJUSTING ROD SUPPORT
128	P0622128	HAND WHEEL
130	P0622130	EXT RETAINING RING 13MM
132	P0622132	LEADSCREW
133	P0622133	WISE NUT
134	P0622134	FRONT VISE JAW
135	P0622135	MOTOR 3/4HP 110V 1-PH
135-1	P0622135-1	MOTOR COVER
135-2	P0622135-2	FAN
135-3	P0622135-3	CAPACITOR COVER
135-4	P0622135-4	R CAPACITOR 35M 250V 1-5/8 X 2-13/16
135-5	P0622135-5	JUNCTION BOX
136	P0622136	HEX BOLT M10-1.5 X 30
137V2	P0622137V2	BED V2.09.17
138	P0622138	LOCK WASHER 8MM
139	P0622139	SCALE
140	P0622140	ELECTRIC CORD COVER
141	P0622141	LONG BRACE
142	P0622142	SHORT BRACE
143	P0622143	GASKET
144	P0622144	POWER CORD
145	P0622145	NUT PLATE
146	P0622146	SPRING ADJUSTING SCREW
147	P0622147	EXTENSION SPRING
148	P0622148	PHLP HD SCR M4-.7 X 10
149	P0622149	REAR VISE JAW
150	P0622150	SET SCREW M8-1.25 X 12

REF	PART #	DESCRIPTION
151	P0622151	FLAT WASHER 8MM
152	P0622152	HEX BOLT M8-1.25 X 25
153	P0622153	HEX BOLT M12-1.75 X 75
154	P0622154	PIVOT
155	P0622155	TABLE
156	P0622156	TABLE BRACKET
156-1	P0622156-1	FENDER WASHER 6MM
156-2	P0622156-2	HEX NUT M6-1
157	P0622157	ADJUSTABLE BRACKET (TOP)
158	P0622158	PHLP HD SCR M6-1 X 10
158A	P0622158A	PHLP HD SCR M5-.8 X 10
158A-1	P0622158A-1	FLAT WASHER 5MM
159V2	P0622159V2	BLADE BACK SAFETY COVER V2.02.08
159V2-1	P0622159V2-1	SAFETY COVER PLATE V2.02.08
159A-1	P0622159A-1	KNOB M6-1 X 8
160	P0622160	EXT RETAINING RING 8MM
161	P0622161	BALL BEARING 629ZZ
162	P0622162	GUIDE PIVOT
163	P0622163	BEARING SHAFT PIN 8 X 40MM
164	P0622164	BLADE ADJUSTABLE SEAT, LOWER
165	P0622165	ADJUSTABLE BRACKET
166	P0622166	GUIDE BEARING LOCK
167	P0622167	LOCK WASHER 8MM
168	P0622168	FLAT HD SCR M6-1 X 12
169	P0622169	BLADE GUARD
170	P0622170	HEX NUT M8-1.25
171	P0622171	FRONT BLADE WHEEL
172	P0622172	BLADE WHEEL BEARING COVER
173	P0622173	KEY 5 X 5 X 30
175	P0622175	PHLP HD SCR M6-1 X 12
176	P0622176	SWITCH CUT OFF TIP
177V2	P0622177V2	REAR BLADE WHEEL V2.02.08
179	P0622179	BLADE TENSION KNOB
180	P0622180	COMPRESSION SPRING
181	P0622181	BODY FRAME
183	P0622183	HEX BOLT M8-1.25 X 25
184	P0622184	MOTOR MOUNT PLATE
185	P0622185	FLAT WASHER 10MM
186	P0622186	MOTOR PULLEY
187	P0622187	BALL BEARING 620ZZ
188	P0622188	BEARING BUSHING
189	P0622189	OIL SEAL
190	P0622190	TRANSMISSION WHEEL SHAFT
191	P0622191	TRANSMISSION GEAR
192	P0622192	GEAR BOX GASKET
193	P0622193	GEAR BOX COVER
194	P0622194	WORM GEAR
196	P0622196	BEARING BUSHING
198	P0622198	HEX BOLT M8-1.25 X 50
199	P0622199	BUSHING
201	P0622201	WORM GEAR PULLEY
203	P0622203	BLADE TENSION PLATE



Parts List (Cont.)

REF	PART #	DESCRIPTION
204	P0622204	HEX BOLT M8-1.25 X 35
205	P0622205	BLADE ADJUSTABLE SEAT, UPPER
206	P0622206	SLIDING PLATE DRAW BLOCK
207	P0622207	BLADE WHEEL SHAFT
208	P0622208	SHAFT BLOCK
209	P0622209	BLADE TENSION SLIDING GUIDES
210	P0622210	MOTOR PULLEY COVER
212	P0622212	V-BELT M22 3L220
213	P0622213	BLADE 1/2 X .028 X 64 1/2
214	P0622214	FLAT WASHER 8MM
217	P0622217	FLAT WASHER 6MM
218	P0622218	EXT RETAINING RING 15MM
222	P0622222	HEX NUT M12-1.75
226A	P0622226A	BALL BEARING 6202ZZ
226A-1	P0622226A-1	INT RETAINING RING 35MM
232	P0622232	BLADE SAFE GUARD
233V2	P0622233V2	HEX NUT M8-1.25 V2.09.17
234V2	P0622234V2	LOCK WASHER 8MM V2.09.17

REF	PART #	DESCRIPTION
235V2	P0622235V2	FLAT WASHER 8MM V2.09.17
236V2	P0622236V2	CARRIAGE BOLT M8-1.25 X 16 V2.09.17
237	P0622237	LOCK WASHER 6MM
256	P0622256	PHLP HD SCR M5-.8 X 25
257	P0622257	LOCK WASHER 5MM
274V2	P0622274V2	WHEEL STAND V2.09.17
275V2	P0622275V2	COTTER PIN 4 X 30 V2.09.17
276V2	P0622276V2	AXLE V2.09.17
277	P0622277	CORNER BRACKET
278	P0622278	MACHINE ID LABEL
279	P0622279	READ MANUAL LABEL
280	P0622280	SAFETY GLASSES LABEL
281	P0622281	ELECTRICITY LABEL
282	P0622282	UNPLUG MACHINE LABEL
283	P0622283	RPM LABEL
284	P0622284	BLADE TRAVEL LABEL
285	P0622285	BLADE SAFETY LABEL
286	P0622286	TIPPING HAZARD LABEL

WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this machine **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.

