


# H0590 Parts Breakdown and List

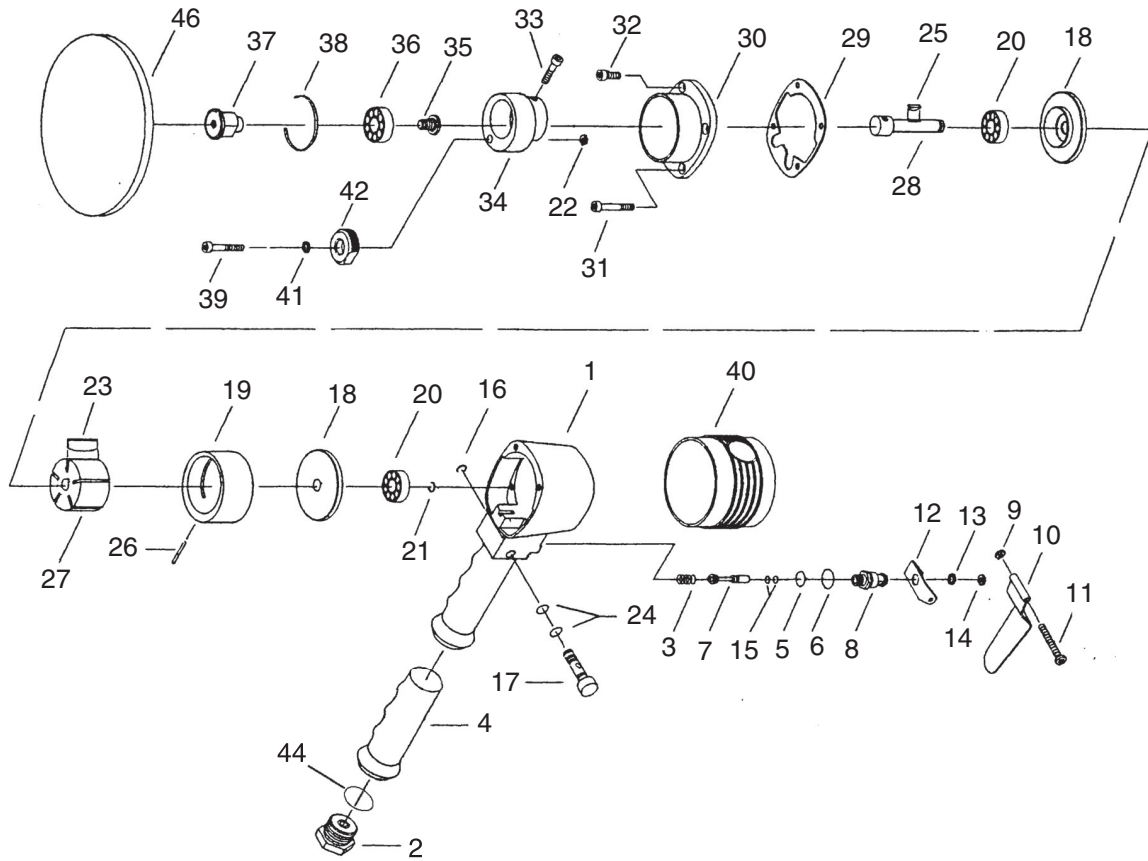

REF	PART #	DESCRIPTION
1	PH0590001	HOUSING
2	PH0590002	AIR INLET
3	PH0590003	VALVE SPRING
4	PH0590004	RUBBER GRIP
5	PH0590005	O-RING 8.4 X 1.4
6	PH0590006	O-RING 6 X 1.4
7	PH0590007	VALVE STEM
8	PH0590008	VALVE BODY
9	PLN12	LOCK NUT 8-32
10	PH0590010	THROTTLE LEVER
11	PS19	PHLP HD SCR 8-32 X 1-1/2
12	PH0590012	BRACKET
13	PLW03M	LOCK WASHER 6MM
14	PN01M	HEX NUT M6-1
15	PH0590015	O-RING 3.4 X 1.4
16	PEC17M	E-CLIP 14MM
17	PH0590017	REGULATOR VALVE
18	PH0590018	END PLATE
19	PH0590019	CYLINDER
20	P6200	BALL BEARING 6200ZZ
21	PEC08M	E-CLIP 16MM
22	PN01M	HEX NUT M6-1

REF	PART #	DESCRIPTION
23	PH0590023	ROTOR BLADE
24	PH0590024	O-RING 4.75 X 1.4
25	PH0590025	WOODRUFF KEY 2.3 X 12
26	PRP14M	ROLL PIN 3 X 6
27	PH0590027	ROTOR
28	PH0590028	ROTOR SHAFT
29	PH0590029	GASKET
30	PH0590030	DRIVE HOUSING
31	PSB79M	CAP SCREW M5-.8 X 35
32	PSB33M	CAP SCREW M5-.8 X 12
33	PSB38M	CAP SCREW M5-.8 X 25
34	PH0590034	ORBITAL HUB
35	PFH40M	FLAT HD SCR M6-1 X 15
36	P6201	BALL BEARING 6201ZZ
37	PH0590037	DRIVE SPINDLE
38	PR21M	INT RETAINING RING 35MM
39	PSB48M	CAP SCREW M6-1 X 35
40	PH0590040	HOUSING COVER
41	PLW03M	LOCK WASHER 6MM
42	PH0590042	SPINDLE LOCK
44	PH0590044	O-RING 22.5 X 2.5
46	PH0590046	6" PAD